


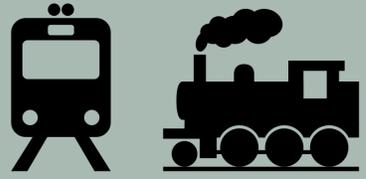

Ballasted R72 Curve Track



PennLUG
variation



Reference Instructions Sheet

007

Rev
A

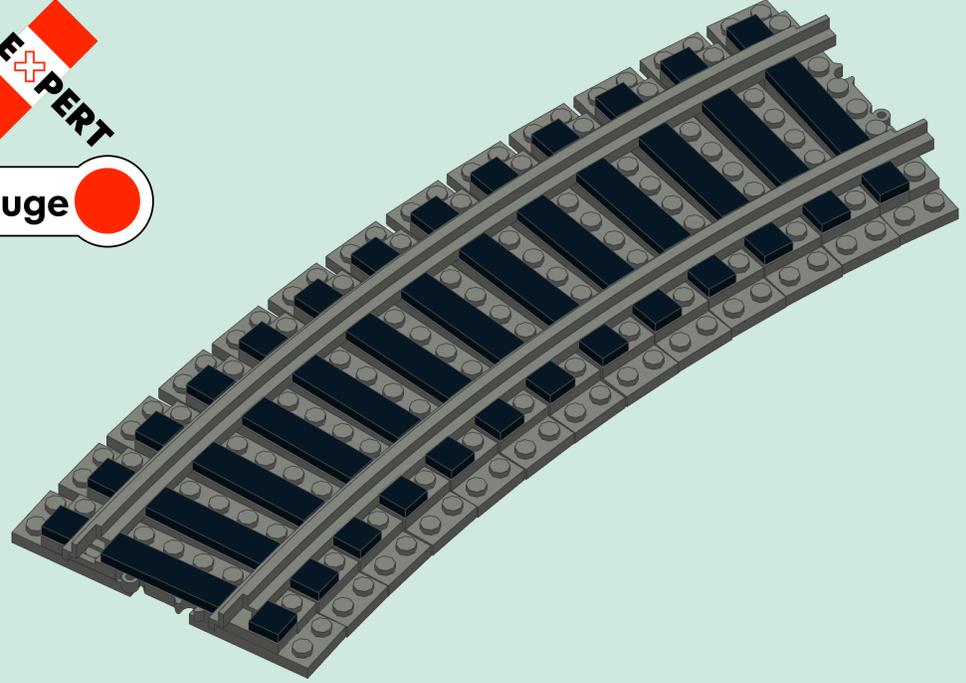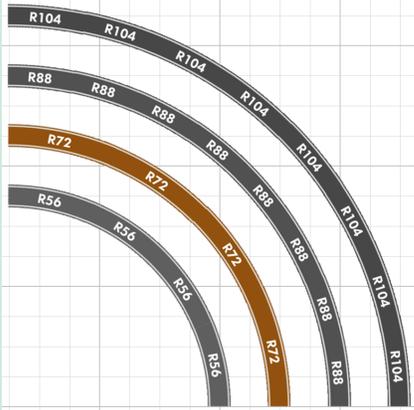

These instructions use techniques which may induce mechanical stress on individual parts. Use at your own risk.


Ballast method designed by Anthony Sava


Parts List

Notes


Instructions are for a single curve track section. Multiply part quantity as required for multiple curves. 16x required for complete circle.

This ballast method requires ME Models R72 curves (P/N ME901-72)


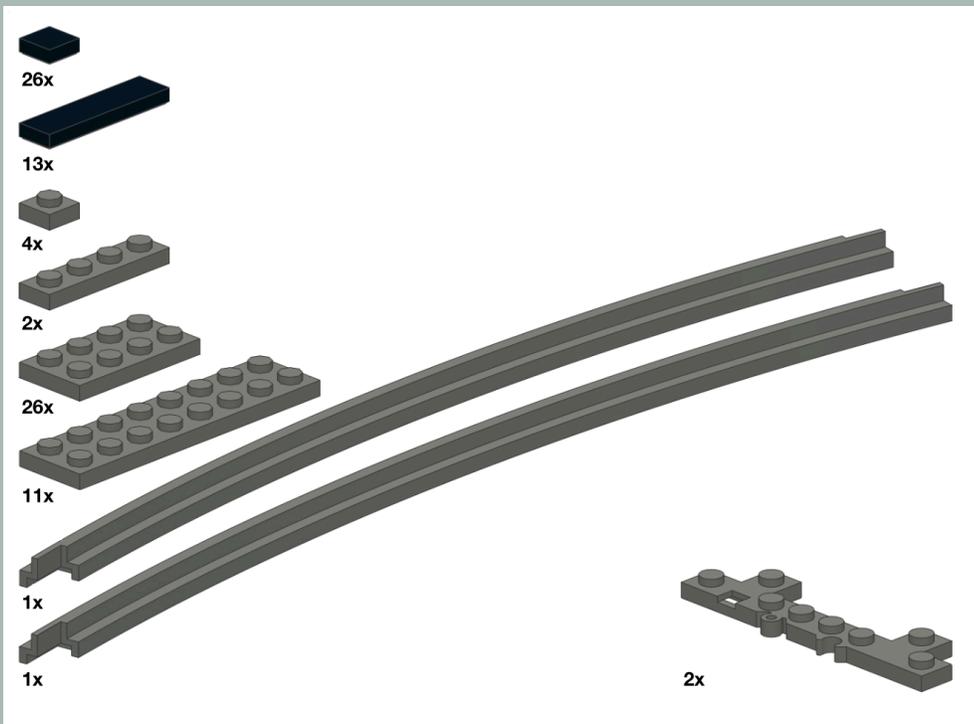


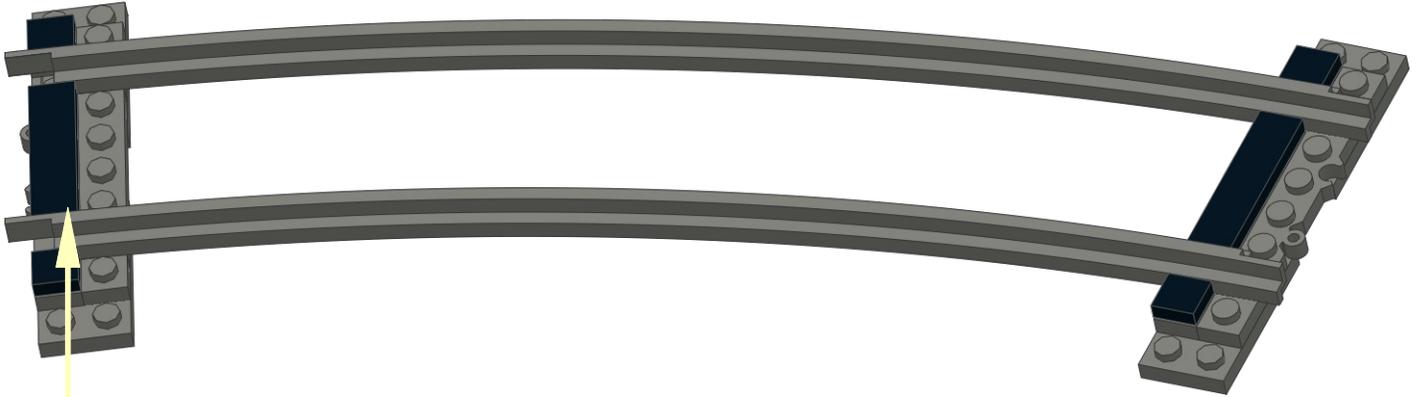



1

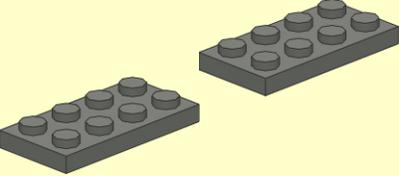



2

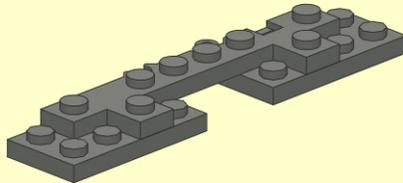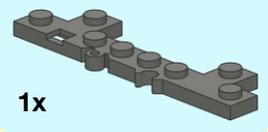



3

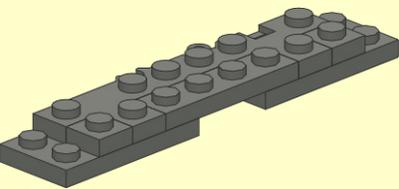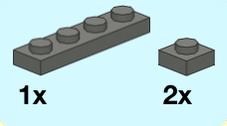


4

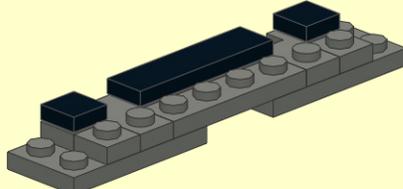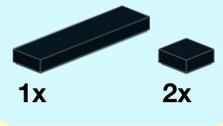


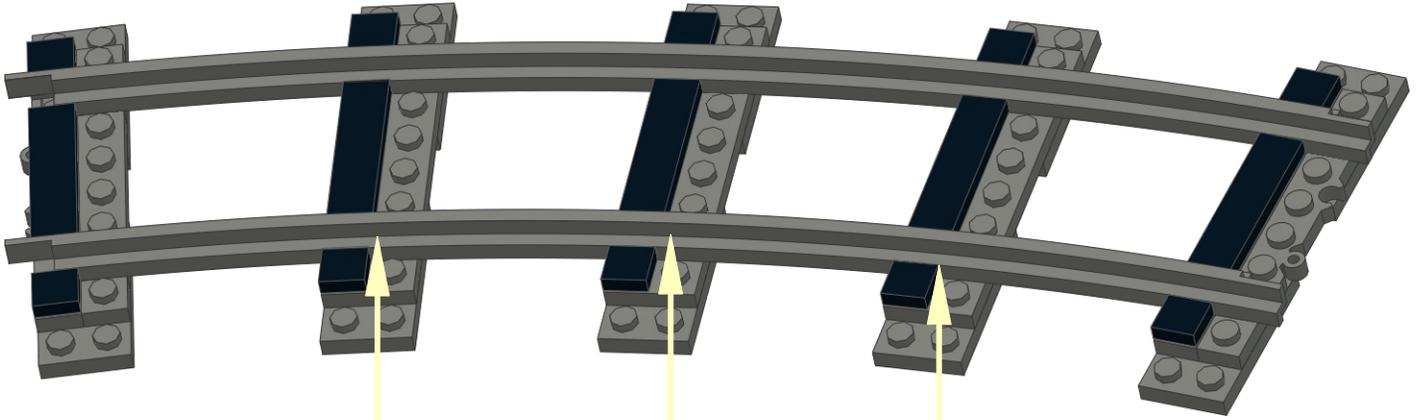


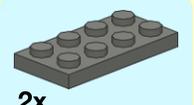1  2x

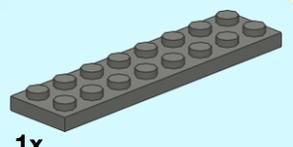
2  1x

3  1x  2x

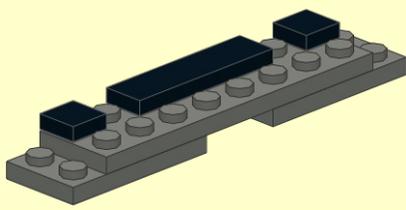 x3

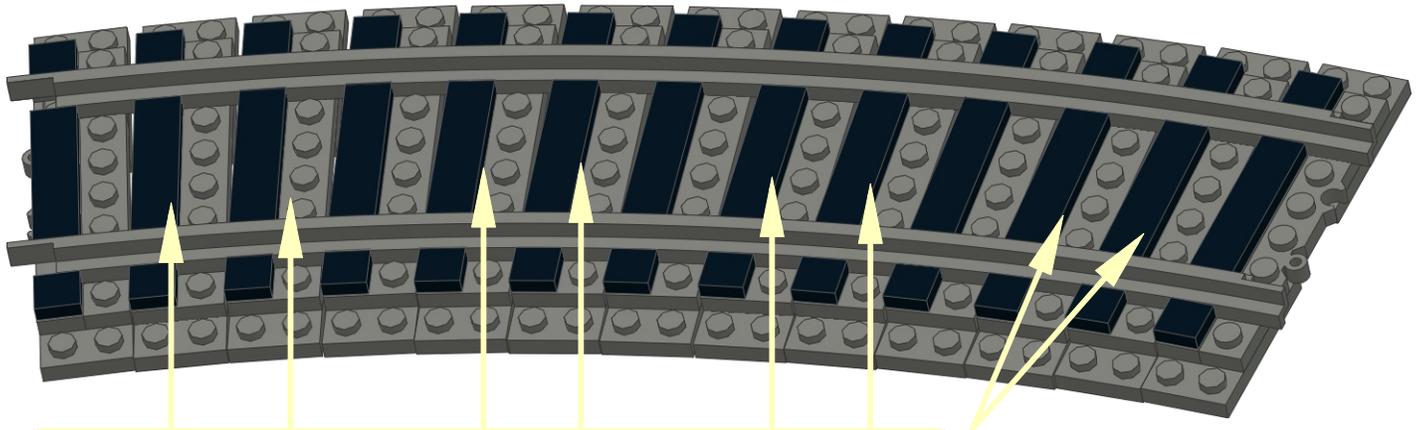


1

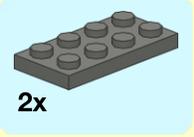


2x


2

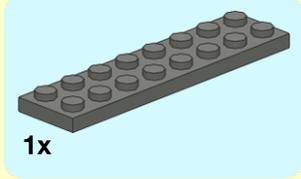

1x

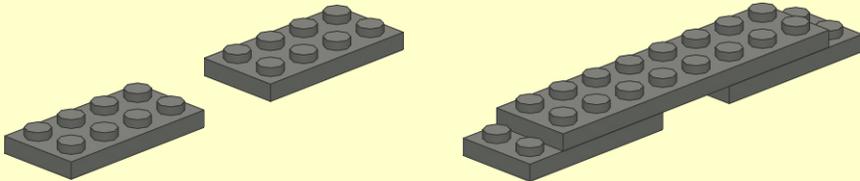


3

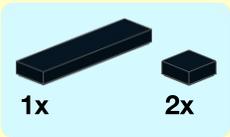

1x

2x

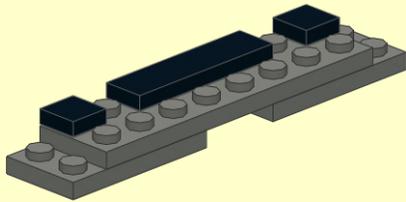

x8